


GTE-ERS
TECHNICAL LIBRARY



01070

**GENERAL RESISTANCE
RDS SERIES**

TABLE OF CONTENTS

1 INTRODUCTION 1

2 GENERAL INFORMATION 2

3 SAFETY 3

4 INSTALLATION 4

5 OPERATION 5

6 MAINTENANCE 6

7 TROUBLESHOOTING 7

8 APPENDICES 8

9 INDEX 9

RDS SERIES

INSTRUCTION / OPERATION MANUAL

Prime Technology, Inc.
General Resistance Division
P.O. Box 185 / Twin Lakes Road
North Branford, CT 06471

Ph: (203) 481-5721
FAX: (203) 481-8937

copyright 1991

TABLE OF CONTENTS

	Page
LIMITED WARRANTY	1
1. INTRODUCTION	2
1.1 Description	2
1.2 Schematic	2
1.3 Specifications / Data Sheet	3
2. OPERATION	5
2.1 General	5
2.2 Power Limitations	5
2.3 Calibration	5
3. CALIBRATION	5
3.1 Equipment Required	6
3.2 Procedure for Measurement of Zero Resistance	6
3.3 Decade Calibration	7
3.4 Maintenance	7
3.5 Recalibration/Recertification Service	7
Figure 1	8
Figure 2	9
Figure 3	10

Page

10/11/2010

1	10/11/2010	10/11/2010
2	10/11/2010	10/11/2010
3	10/11/2010	10/11/2010
4	10/11/2010	10/11/2010
5	10/11/2010	10/11/2010
6	10/11/2010	10/11/2010
7	10/11/2010	10/11/2010
8	10/11/2010	10/11/2010
9	10/11/2010	10/11/2010
10	10/11/2010	10/11/2010
11	10/11/2010	10/11/2010
12	10/11/2010	10/11/2010
13	10/11/2010	10/11/2010
14	10/11/2010	10/11/2010
15	10/11/2010	10/11/2010
16	10/11/2010	10/11/2010
17	10/11/2010	10/11/2010
18	10/11/2010	10/11/2010
19	10/11/2010	10/11/2010
20	10/11/2010	10/11/2010
21	10/11/2010	10/11/2010
22	10/11/2010	10/11/2010
23	10/11/2010	10/11/2010
24	10/11/2010	10/11/2010
25	10/11/2010	10/11/2010
26	10/11/2010	10/11/2010
27	10/11/2010	10/11/2010
28	10/11/2010	10/11/2010
29	10/11/2010	10/11/2010
30	10/11/2010	10/11/2010
31	10/11/2010	10/11/2010
32	10/11/2010	10/11/2010
33	10/11/2010	10/11/2010
34	10/11/2010	10/11/2010
35	10/11/2010	10/11/2010
36	10/11/2010	10/11/2010
37	10/11/2010	10/11/2010
38	10/11/2010	10/11/2010
39	10/11/2010	10/11/2010
40	10/11/2010	10/11/2010
41	10/11/2010	10/11/2010
42	10/11/2010	10/11/2010
43	10/11/2010	10/11/2010
44	10/11/2010	10/11/2010
45	10/11/2010	10/11/2010
46	10/11/2010	10/11/2010
47	10/11/2010	10/11/2010
48	10/11/2010	10/11/2010
49	10/11/2010	10/11/2010
50	10/11/2010	10/11/2010
51	10/11/2010	10/11/2010
52	10/11/2010	10/11/2010
53	10/11/2010	10/11/2010
54	10/11/2010	10/11/2010
55	10/11/2010	10/11/2010
56	10/11/2010	10/11/2010
57	10/11/2010	10/11/2010
58	10/11/2010	10/11/2010
59	10/11/2010	10/11/2010
60	10/11/2010	10/11/2010
61	10/11/2010	10/11/2010
62	10/11/2010	10/11/2010
63	10/11/2010	10/11/2010
64	10/11/2010	10/11/2010
65	10/11/2010	10/11/2010
66	10/11/2010	10/11/2010
67	10/11/2010	10/11/2010
68	10/11/2010	10/11/2010
69	10/11/2010	10/11/2010
70	10/11/2010	10/11/2010
71	10/11/2010	10/11/2010
72	10/11/2010	10/11/2010
73	10/11/2010	10/11/2010
74	10/11/2010	10/11/2010
75	10/11/2010	10/11/2010
76	10/11/2010	10/11/2010
77	10/11/2010	10/11/2010
78	10/11/2010	10/11/2010
79	10/11/2010	10/11/2010
80	10/11/2010	10/11/2010
81	10/11/2010	10/11/2010
82	10/11/2010	10/11/2010
83	10/11/2010	10/11/2010
84	10/11/2010	10/11/2010
85	10/11/2010	10/11/2010
86	10/11/2010	10/11/2010
87	10/11/2010	10/11/2010
88	10/11/2010	10/11/2010
89	10/11/2010	10/11/2010
90	10/11/2010	10/11/2010
91	10/11/2010	10/11/2010
92	10/11/2010	10/11/2010
93	10/11/2010	10/11/2010
94	10/11/2010	10/11/2010
95	10/11/2010	10/11/2010
96	10/11/2010	10/11/2010
97	10/11/2010	10/11/2010
98	10/11/2010	10/11/2010
99	10/11/2010	10/11/2010
100	10/11/2010	10/11/2010

LIMITED WARRANTY

General Resistance Div. warrants each instrument to be free from defects in material and workmanship for a period of one year from date of purchase.

The obligation of General Resistance Div. under this Warranty is limited solely to servicing or adjusting any failed instrument returned, shipped prepaid, to the factory for that purpose.

Units returned under this Warranty shall be examined by General Resistance Div. to establish that the failure resulted from defective material and/or workmanship and not as a result of misuse, neglect, or improper operation, which latter failure is not within the meaning of this Warranty.

This Warranty does not cover collateral or consequential damages of any nature, type or description, whether resulting from express warranties, implied warranties or negligence.

General Resistance Div. reserves the right to make changes to design at any time without incurring any obligation to install same in units previously purchased.

This Warranty is expressly in lieu of all other obligations or liabilities on the part of General Resistance Div., express or implied, and General Resistance Div. neither assumes nor authorizes any person to assume for them any other liability in connection with the sale of General Resistance Div. products.

UNITED STATES

General Regulations for the use of the United States in the year 1900
in relation to the United States in the year 1900

The following are the regulations for the use of the United States in the year 1900
in relation to the United States in the year 1900

These regulations are for the use of the United States in the year 1900
in relation to the United States in the year 1900

These regulations are for the use of the United States in the year 1900
in relation to the United States in the year 1900

These regulations are for the use of the United States in the year 1900
in relation to the United States in the year 1900

These regulations are for the use of the United States in the year 1900
in relation to the United States in the year 1900

Section 1

INTRODUCTION

1.1 Description

The General Resistance RDS4_, 5_, 6_ and 7_ are the same except for the number of decades and the decade values.

These instruments are resistance standards for field and laboratory resistance calibrations. Its rugged construction employs high reliability encapsulated wirewound resistors with very low, matched temperature coefficients. Their high stability assures specified performance even after years of continuous use. All switches employed are high quality and use solid silver contacts for low, unvarying, contact resistance and long life. All insulation is of the highest grade to give extremely high leakage resistances under adverse temperature and humidity conditions.

Figure 1 is an outline drawing of the instrument. The terminals are accessible on the left side of the front panel. A case (ground) terminal as well as high and low inputs are provided. Decade dials are used to set the desired resistance value. The value is conveniently read from the in-line numerals.

1.2 Schematic

Figure 2 shows the schematic of a six decade resistance box. Please note that all schematics are identical except for the number of decades. Each decade uses ten equal, matched resistors which are wired in series and sequentially unshorted as the switch contact is rotated from zero to maximum resistance. The separate decades are all wired in series across the input terminals. All decades are floating with respect to the case. The LOW terminal can be grounded to the case, if desired.

Digitized by the Internet Archive
in 2025

1.3 Specifications

Number of decades: Four, Five, Six or Seven

Resistance range:

Model	No. of Decades	Total Resistance Ohms	Ohm/Step Highest Decade	Ohms/Step Lowest Decade	Max. Zero Resistance Ohms
-------	-------------------	-----------------------------	-------------------------------	-------------------------------	---------------------------------

TABLE I

RDS41	4	111.1	10	.01	0.006
RDS42	4	1.111K	100	0.1	0.006
RDS43	4	11.11K	1K	1	0.006
RDS44	4	111.1K	10K	10	0.006
RDS45	4	1.111 Meg	100K	100	0.006
RDS52	5	1.1111K	100	.01	0.0075
RDS53	5	11.111K	1K	0.1	0.0075
RDS54	5	111.11K	10K	1	0.0075
RDS55	5	1.1111 Meg	100K	10	0.0075
RDS56	5	11.111 Meg	1 Meg	100	0.0075
RDS63	6	11.1111K	1K	.01	0.009
RDS64	6	111.111K	10K	0.1	0.009
RDS65	6	1.11111 Meg	100K	1	0.009
RDS66	6	11.1111 Meg	1 Meg	10	0.009
RDS74	7	111.1111K	10K	.01	0.0105
RDS75	7	1.111111 Meg	100K	0.1	0.0105
RDS76	7	11.11111 Meg	1 Meg	1	0.0105

Temperature Coefficient: +/-20 ppm/Deg C max

Resistance accuracy (at
25 Deg C after subtraction
zero resistance):

See Table II

Wattage rating of individual
resistors:

See Table II

Maximum current/decade
(mA):

See Table II

Stability:

25 ppm/yr, 100 ohm decade up
100 ppm/yr, 10 ohm decade
0.05%/yr, 1 ohm decade
0.1%/yr, .1 and .01 ohm decade

Size:

See Figure 1

Weight:

Six (6) pounds

Specifications (continued)

TABLE II

Ohm/Step

0.01

0.1

***ALL SPECIFICATIONS ARE PER

1

LATEST GENERAL RESISTANCE

10

DATA SHEET FOR RDS SERIES

100

RESISTANCE DECADES -

1K

BULLETIN GR104***

10K

100K

1 Meg

Section 2

OPERATION

2.1 General

The operation of these instruments is straight forward. The resistance set between the HIGH and LOW front panel terminals is the sum of the values set on each decade dial, without recourse to any multipliers, in series with a zero resistance which is less than 10.5 milliohms. The selected resistance is easily read on the in-line display.

2.2 Power Limitations

The resistors have a (maximum) power rating at an ambient temperature of 25 Deg C. The maximum allowable current at this ambient, for each decade is per Table II. Because all decades are in series, if more than one decade is in use (set to a value other than zero), the maximum allowable current is the value given for the highest resistance decade used.

2.3 Calibration

Each instrument is warranted to perform within the specifications of Section 1.3, without recalibration or readjustment, for a period of 1 year.

Section 3

CALIBRATION

Although the instruments are highly stable devices, periodic calibration permits accuracy improvement by taking advantage of the instrument's short term stability. For ultimate accuracy, the decade resistance box should be calibrated at the voltage and temperature conditions of actual usage.

3.1 Equipment Required

- a) A Wheatstone bridge, calibrated to an accuracy of a few parts per million (General Resistance Model 6003E, Model PWB-6000, or equal).
- b) A constant current supply capable of delivering 10 milliamps DC to a 100 ohm load, with an accuracy of a few parts per million (General Resistance Model DAS-56).
- c) A voltage calibrator, with an accuracy and stability of a few parts per million, capable of an open circuit output of 0-1 volts DC and resolution of 1 ppm (General Resistance Model DAV-46 or equal).
- d) A high impedance (1 megohm or greater) null detector or microvolt meter with a sensitivity of better than 10 microvolts.

3.2 Procedure for Measurement of Zero Resistance

The first step in the calibration is the determination of the zero resistance of the decade resistance box under test. The preferred method is to set all decades to zero, cause an accurately known current (10mA DC is suggested) to flow through the instrument under test, and measuring the ensuing voltage drop across the input terminals. The zero resistance is then calculated from the ratio of the measured voltage drop to the applied current (10mA). The zero correction is normally very small, unless the decade resistance box is used for very low resistance settings, so that this zero resistance measurement need not be made to high accuracy. However, the same test setup used for calibration of the low ohm decades can be used with very good accuracy. In many applications knowledge of the zero resistance is not required, and incremental accuracy is more important.

3.3 Decade Calibration

After the zero resistance of the box is measured, all decades can be calibrated. Low value decades (below 100 ohms) are best calibrated by the method described in the preceding paragraph. Figure 3 shows the recommended connection of the calibration equipment. The constant current supply forces an accurately known 10mA DC through the decade under test. The voltage drop at the instrument terminals is read with high precision by nulling the sensitive meter with an accurately calibrated, high resolution voltage source. The cumulative resistance set on the instrument under test is then calculated as the ratio of the voltage drop, as read from the nulling reference voltage source to the 10mA current from the constant current supply. The incremental value of any step can be determined by subtraction of the cumulative value before and after insertion of the step.


Calibration of the decades having steps of 100 ohms and greater is most conveniently performed with a calibrated, high accuracy Wheatstone Bridge. To obtain accurate calibration of the instrument, it will be necessary to utilize the bridge correction factors, and to make all measurements in a temperature controlled environment, or where necessary, to correct for temperature-caused errors. When connecting the instrument to the Wheatstone Bridge, some consideration should be given to the resistance of the connecting leads. For maximum accuracy, this resistance can be measured in the same fashion as the zero resistance, and suitable correction made for its magnitude.

3.4 Maintenance

No maintenance should ever be required for the instruments.


3.5 PRIME TECHNOLOGY, INC. RECALIBRATION/RECERTIFICATION SERVICE

Prime Technology, Inc. offers a full Recalibration/Recertification Service. Please call us at (203) 481-5721 or FAX us at (203) 481-8937 for more information.

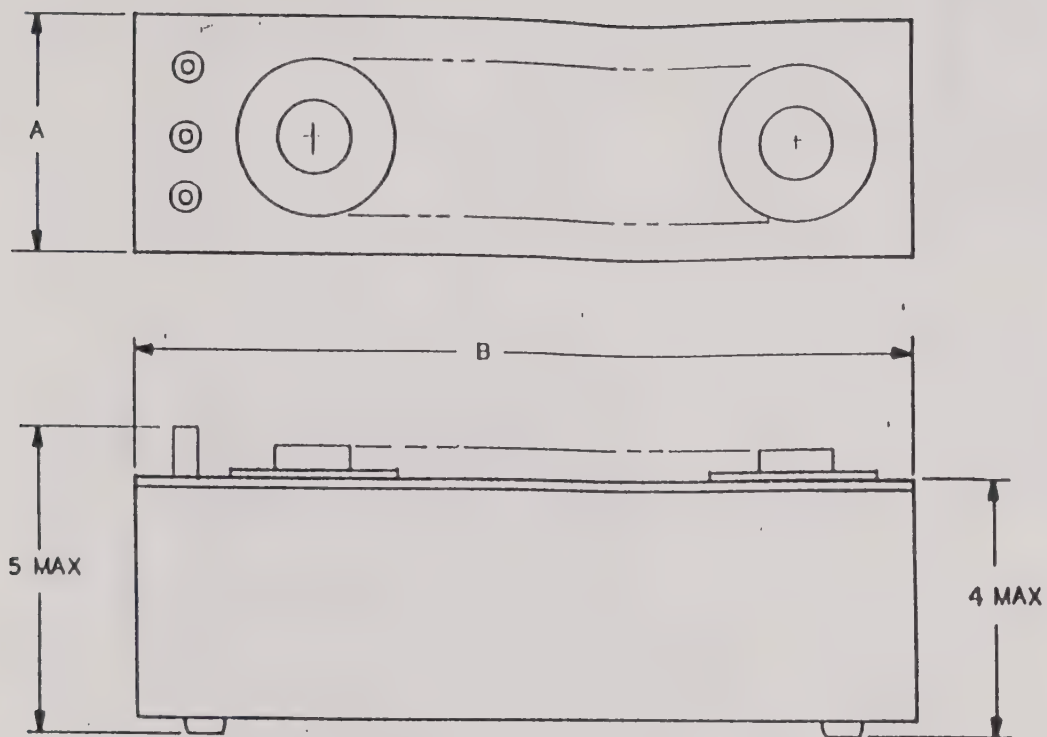

NO OF DIALS	A DIM	B DIM
4	4	17
5	4	17
6	4	17
7	4	17

Figure 1



NOTE: See Section 1.3 (Specifications) for decade values per unit.

Unit shown is a 6 decade unit or RDS 6 __H. The 4 decade schematic is the same but with 2 less decades, etc.

[illegible]

Measurement of Zero Resistance and
Decades of One and Ten Ohms Per Step

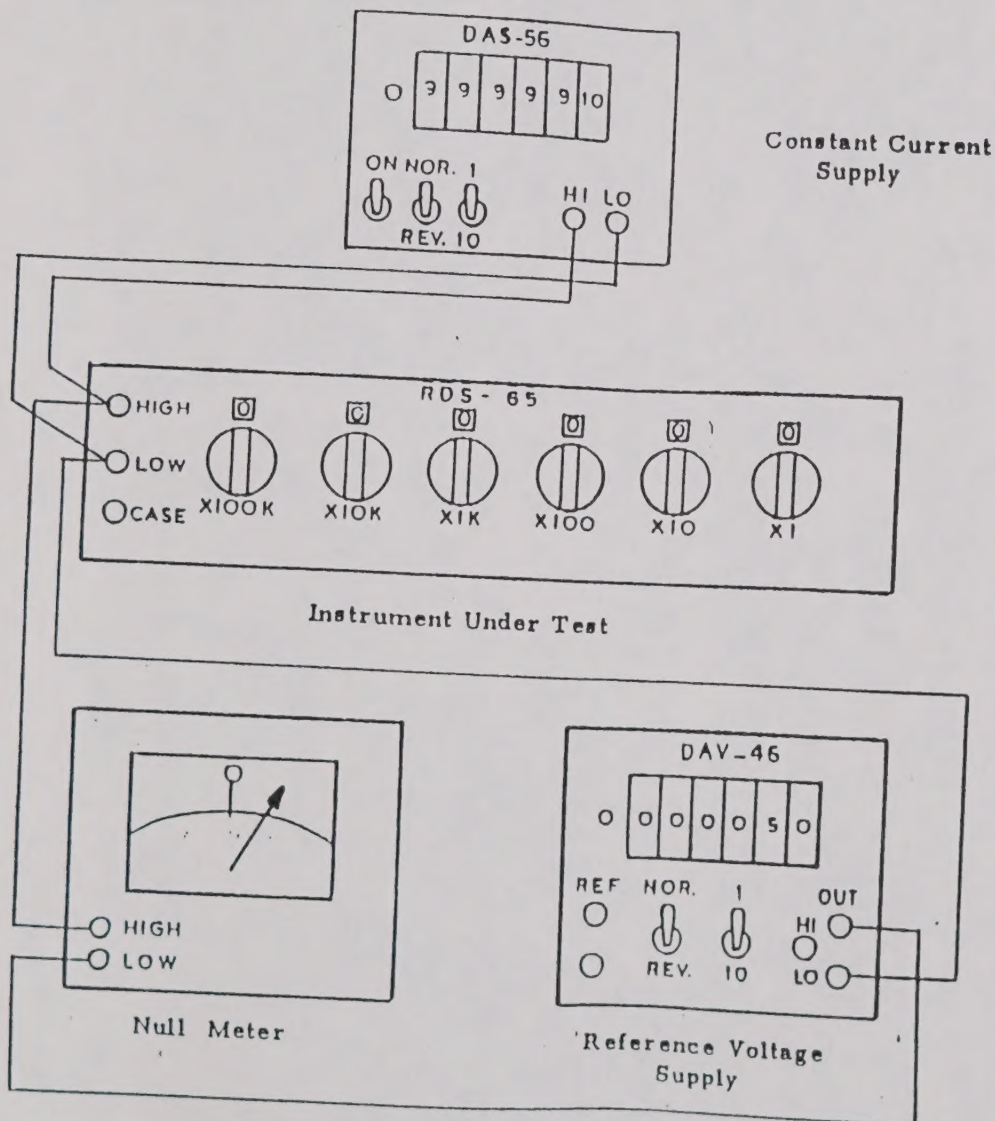


Figure 3



ACCO USA, INC.
770 S. ACCO PLAZA
WHEELING, IL 60090



GENUINE PRESSBOARD	
25979	EXECUTIVE RED
25978	RED
25977	TANGERINE
25976	DARK GREEN
25975	LIGHT GREEN
25974	LIGHT GRAY
25973	DARK BLUE
25972	LIGHT BLUE
25971	BLACK
25970	YELLOW

ACCO PRESS®